



Instruction Booklet 사용설명서



25MM TOURMALINE CERAMIC STRAIGHTENER 25MM 세라믹 스트레이트너

VS2010PIK



VS SASSOON 25MM TOURMALINE CERAMIC STRAIGHTENER

The VS SASSOON 25MM tourmaline ceramic straightener heats up to 230°C for fast straightening with surround heat designed for creating curls.

It features ceramic tourmaline nano silver floating plates for smooth results and it's multi voltage so you can take it with you all over the world.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.


Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
11. Allow the unit to cool before storing.

12. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
13. Before plugging in, read the information about worldwide voltage contained in the operating instructions section of this manual.
14. Do not use with a voltage converter.

FEATURES

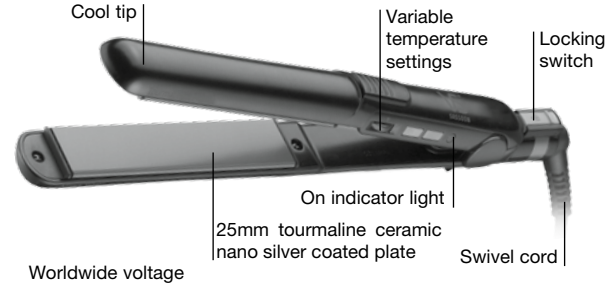

OPERATING INSTRUCTIONS

This straightening iron appliance is intended for household use. This unit is designed to operate at 100-240 volts AC. Use on Alternating Current (50-60 hertz) only.

WORLDWIDE VOLTAGE

This straightening iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

HOW TO USE YOUR STRAIGHTENER

For use on dry hair only.

- Remove all packaging and sale labels before use.
- Wash and condition your hair as usual. Ensure that hair is dry, combed through and tangle-free.
- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
- Plug the appliance into a suitable power outlet and press the on (I) button. The red indicator light will turn on and start to flash.
- Select the desired temperature using the temperature dial. Please see 'How to use the variable temperature settings' for more information.
- Allow the straightener to heat up, the red light will stop flashing when the unit has heated up to the selected temperature. Your straightener is now ready to use.
- To turn appliance off, press the off (O) button and the red indicator light will turn off. Unplug the appliance from the power outlet and allow to cool before storing.

IMPORTANT:

Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

HOW TO USE THE VARIABLE TEMPERATURE SETTINGS

The variable temperature settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type. NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

WARNING: This appliance is suitable for average use on the medium high heat setting of 200°C(Temp. Setting index mark as 15-20). The 215°C and 230°C(Temp. Setting index mark as 20-25) maximum high heat settings are not suitable for hair that has been chemically treated, bleached or damaged.

Temp. Control Setting	Hair Type
1-5	Delicate, fine, bleached hair
5-10	Average to thick, treated hair
10-15	Thick or wavy hair
15-20	Hard to straighten, thick hair
20-25	Hard to straighten, very thick curly hair

HOW TO USE THE LOCKING SWITCH?

The locking switch is used to hold the plates together when the straightener is not in use for easy and convenient storage. After use, turn the appliance off and allow to cool. Hold the straightener handle together and slide the locking switch across to secure the plates. To unlock, simply slide the locking switch in the other direction.

AUTOMATIC SAFETY CUT OFF SYSTEM

This appliance has an automatic safety cut off system which will automatically turn the appliance off if left on accidentally for 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off and unplug the power cord. Plug the power cord in and switch the appliance on.

WHAT IS CERAMIC TOURMALINE NANO SILVER TECHNOLOGY?

Ceramic tourmaline nano silver technology unites micro particles of nano silver, tourmaline and ceramic when combined with heat seals the hair cuticle to leave hair with reduced frizz and enhanced shine.

MAINTENANCE

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

However, in order to keep the best performance from your straightening iron all the time, please note the following care instructions.

- Do not scratch the surface of the plates with sharp objects or wipe with coarse material.
- Do not use this straightening iron with strong chemicals, like

perm lotions.

- Do not clean the plates with strong cleaning agents. In most cases, mild detergent will be able to remove any stains or traces of styling products left on the plates easily.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.



CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	3/16/2012
Customer	VS-KOREA
Model No.	VS2010PIK
Description	IB
Job No.	12VS00034
Reference No.	IB-11/411A
Revision No.	0
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Cherry Long
Approved by	Jimmy Ng/Ming Lam
Vendor	MILLPLAN
Supplier	

折疊方法
Folding method:
12 pages (6 x 2)



수입 판매원

콘에어코리아트레이딩 주식회사
서울시 성동구 성수동 308-4 서울 숲 코오롱 디지털
타워 2002호
소비자 상담실: 1899-0209
www.vidalsassoon.kr

Conair Far East Ltd.,
A Subsidiary of Conair Corporate USA Conair Corporation USA,
1 Cummings Point Road, Stamford, Connecticut 06902 USA
www.toolsfassoon.com

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair Corporation.

VS2010PIK

IB-11/411A

비달사순 25MM 세라믹 스트레이트너

비달사순 25mm 토르말린 세라믹 스트레이트너는 최고 230°C 까지의 예열기능으로 빠른 스트레이트와 함께 컬 스타일을 연출 할 수 있도록 제작되었습니다. 세라믹 토르말린 나노 실버 열 판의 특징은 부드러운 모발을 연출하고 멀티 전압으로 전세계 어디에서나 사용이 가능합니다.

주요 안전 주의사항

제품 사용 시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하셔야 합니다.

사용 전 반드시 사용설명서를 숙지하여 주십시오. 물에 접촉하거나 빠뜨리시면 안됩니다.

안전주의

경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않는 안전한 곳에 두십시오. 유아 및 어린이 침대, 유모차, 어린이 놀이지역 안에서는 절대 사용하지 마십시오. 포장재는 장난감이 아닙니다. 얇은 막 물질이 코나 입에 붙어 유아나 어린이가 질식 될 수 있습니다.


경고: 이 제품을 욕조, 샤워장, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.

- 부득이 물이 있는 곳에서 사용하실 경우 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져있더라도 물 근처에서 사용하시면 위험합니다. 보다 안전한 사용을 위하여 욕실의 잔류전류 용량은 30mA이하여야 합니다. 욕실 등에서 사용 시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
- 물 또는 액체에 절대로 빠뜨리시면 안 됩니다.
- 전원코드가 손상되었을 경우 사용을 중단 하시고 비달사순 A/S 센터에서 반드시 수리를 받으셔야 안전합니다.
- 제품을 떨어뜨리거나, 제품이 손상된 것처럼 보일 경우 사용을 중단하십시오.
- 전원을 연결하거나 스위치를 켜 상태에서 제품을 보관하지 마십시오.
- 사용상에 문제가 발생하면 즉시 전원을 끄십시오.
- 제조업체가 공급하는 부품 외의 부품은 사용하지 마십시오.
- 제품 사용 후나 제품세척 전에는 반드시 전원을 끄십시오.
- 기기의 고온표면이 피부(특히 귀, 눈, 얼굴 및 목 부위)에 닿지 않도록 주의하셔야 합니다.
- 본 제품은 영, 유아, 어린이 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용되어서는 안 되며, 사용시엔 반드시 안전을 책임지는 보호자의

지도로 사전 사용설명교육 후 사용하도록 합니다. 특히 어린이가 장난감처럼 사용 하지 않도록 각별히 주의해 주십시오.

- 제품 보관 시에는 반드시 기기의 열기가 식은 상태에서 보관 하도록 합니다.
- 전원코드의 손상을 막기 위해 꼬거나 구부러져 보관하지 말아 주십시오.
- 사용전, 전 세계 전압 사용 내용과 함께 사용 설명서를 숙지 하십시오.
- 전압 변환기 와 함께 사용하지 마십시오.

제품 특징

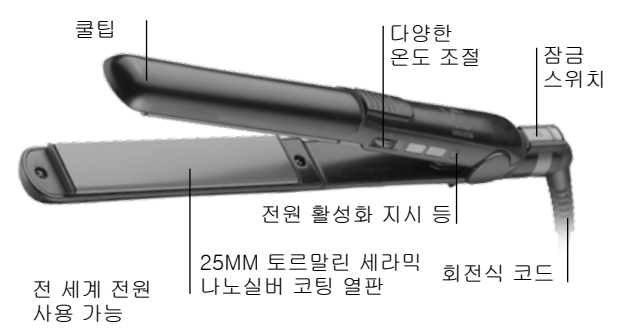

사용방법

본 제품은 가정용으로 제작 되었습니다. 본 제품의 사용은 100~240 볼트 AC이 적합하며 50~60 hertz의 전기 교류에서만 사용하십시오.

전세계 전압 사용 가능

본 제품은 자동으로 전압이 조정 됩니다. 적당한 아답터를 사용 하여 전원 입구에 맞게 사용 합니다.

스트레이트 방법

건조된 모발에만 사용 하십시오.

- 사용 전 판매 용도를 위한 포장 등을 모두 제거하십시오.
- 평소와 같이 머리를 감은 후 컨디셔닝을 합니다. 모발을 건조 시에는 반드시 영키지 않도록 합니다.
- 플라스틱 커버는 전원 코드의 손상을 방지하기 위해 만들어졌습니다. 전기 스위치에 꽂기 전 반드시 제거하십시오.
- 스트레이트에 전원을 100V~240V에 맞는 전원에 연결 후 (I) 전원 활성화 버튼을 누릅니다.
- 온도 조절 다이얼에서 원하는 온도를 선택합니다. 모발에 따른 온도 선택방법을 참고 하도록 합니다.
- 본 제품은 영, 유아, 어린이 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용 되어서는 안 되며, 사용시엔 반드시 안전을 책임지는 보호자의 이제 사용 하셔도 좋습니다.

- 기기를 끄시려면 (o)버튼을 누르면 붉은 지시 등이 꺼집니다. 코드를 뽑아 전원은 분리 후 제품을 차갑게 한 후 보관 하도록 합니다.

중요

많이 염색된 모발 또는 약품 처리로 인한 코팅 모발의 경우, 낮은 온도에 설정하여 헤어 기기를 사용 하도록 합니다. 만일 모발상태에 문제가 있을 시에는 예열기기에 대하여 전문가와 상의 하십시오.

다양한 온도 설정 사용 방법

다양한 온도 설정 기능은 다양한 모발을 위한 다양한 예열기능을 가지고 있습니다. 이러한 설정은 모발 타입에 따라 필요한 온도 설정을 선택할 수 있습니다. 주의 사항: 예열시간은 어느 온도에 설정했는지에 따라 달라집니다.

처음으로 기기를 사용할 때에는 낮은 예열에 설정하여 사용하도록 권장합니다.

경고: 이 헤어 기기는 평균적으로 사용하기에 적합한중간 이상의 높은 온도인 200°C (15~20과 같은 온도설정 인덱스 표시) 215°C 230°C(20~25으로 온도설정 인덱스 표시) 최고 높은 예열 설정은 화학적으로 처리된 코팅된 모발이나, 탈색, 손상된 모발에는 적합하지 않습니다.

모발에 따른 온도 선택 방법

선택 단계	온도선택과 모발 상태
1-5	연약하고 얇은 염색, 탈색된 모발
5-10	보통굵기의 모발 , 웨이브 헤어
10-15	굵은 모발, 웨이브 헤어
15-20	스트레이트 하기 힘든 모발, 굵은 모발
20-25	스타일링이 힘든 모발, 매우 두꺼운 곱슬머리

잠금 장치 사용 방법

잠금 장치는 제품을 사용하지 않을 때 스트레이트너 열 판을 달아서 쉽고 편리하게 보관하기 위한 용도입니다. 제품을 사용 후에는 전기를 끄고 제품을 차갑게 한 후 열 판을 닫은 후 잠금 스위치를 밀어서 잠그도록 합니다. 잠금 장치를 풀기 위해서는 반대방향으로 슬라이드를 밀어서 풀도록 합니다.

자동 안전 전원 차단 시스템

이 기기는 사용하지 않을 시에는 72분 동안 자동 안전 전원 차단 기능을 가지고 있습니다. 만일 문제가 발생하면 기기가 차가워질 때까지 기다리십시오. 기기의 전원 스위치를 끄고 전기 코드를 뽑으십시오. 전기 코드를 꽂고 스위치를 켵니다.

세라믹 나노 실버 기술에 대하여

세라믹 토르말린 나노실버 기술은 나노실버, 토르말린 과 세라믹의 미세 입자들이 예열 시 결합하여 모발의 큐티클을 밀봉하여 모발의 부시시함을 줄여주고 모발의 윤기를 강화합니다.

사용자 주의 사항

본 제품은 별도의 유지 보수를 필요로 하지 않습니다. 윤활유 첨부를 필요로 하지 않습니다. 적절한 사용을 위해서는 제품을 반드시 깨끗한 상태로 유지 하여야 합니다. 청소가 필요한 경우, 전원을 끄고 제품이 차가워진 상태에서 마른 수건을 이용하여 닦아서 청소합니다. 만일 코드 또는 제품의 파손으로 작동 되지 않을 시에는 비달사순 서비스 센터로 연락 하셔서 수리하십시오. 소비자가 직접 제품을 수리하려 시도 하지 마십시오.

제품의 상태를 최상으로 유지하기 위해서는 다음사항을 준수하시기 바랍니다.

- 날카로운 물건으로 기기표면을 긁거나 거친 표면의 제품으로 닦지 마십시오.
- 파마약과 같은 강한 화학물질과 함께 사용하지 마십시오.
- 강한 세척제품으로 표면을 닦지 마세요. 순한 세제만으로도 기기표면에 잔재해 있는 대부분의 얼룩이 쉽게 제거됩니다.

위험

절대로 전선을 잡아당기거나 끄는 등 심하게 구부리지 마시고 전선으로 기기를 너무 단단히 감지 마세요. 이는 전선의 손상 및 파열, 합선문제를 발생시킬 수 있습니다. 전선을 수시로 확인하시고 손상됐을 시엔 제품사용을 즉시 중단하시기 바랍니다.

보관

제품을 사용하지 않을 때는 반드시 전원을 안전 하게 분리하고 제품을 차갑게 한 후 어린이의 손이 닿지 않는 안전하고 건조한 곳에 보관하십시오. 전원에서 분리할 때는 감자기 잡아당기거나 너무 팽팽하게 전선을 잡아당기지 마시고 전선으로도 제품을 감지 마십시오. 제품의 연결부위의 전선을 끈게 유지하여 자연스럽게 걸어두거나 놓아두도록 합니다.

제품 품질 보증서

성명	
전화번호	/휴대폰번호
e-mail	
주소	
구입일자(년/월/일)	
모델번호(사용설명서 앞면 표기)	
대리점명(구입처)	

■ 주의사항

- 서비스를 받고자 하실때는 이 보증서의 구입 영수증을 제시하여 주십시오.
- 제품 구입일자가 고쳐지거나, 지워졌을 경우에 본 보증서는 무효입니다.
- 이 보증서를 분실하실 경우, 재발행되지 않습니다.

본 보증서는 보관하십시오

■ 품질 보증의 조건

- 본 제품의 품질보증 기간은 구입 일자로부터 2년간 입니다.
- 일상적인 사용에 의한 제품의 마모나, 마멸 또는 천체지변에 의한 제품의 손상 및 사용 설명서 상의 주의사항을 따르지 않고 임의로 사용하거나, 취급부주의로 인한 고장 등에 대해서는 본 보증서에 의한 무상 서비스를 받을 수 없습니다.
- 품질보증서 상의 보증기간 내에는 제조상 또는 제질상의 결함으로 발생한 불량 등 에 대하여 무상 서비스를 받을 수 있으며 폐사의 판단에 따라 부품의 교환 또는 제품의 교환도 가능합니다.
- 본 보증서의 효력은, 품질 보증서와 보증 등록서상의 대리점의 판매 확인과 제품구입 후 4주 이내 보증등록서가 고객 서비스 센터에 우송 되었을 때로부터 발생 합니다.
- 본 제품 품질보증은 수입판매원의 관할 이외 지역과 적법하게 위임 받지 않은 판매처의 보증일 경우 효력을 상실합니다.

서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

수입 판매원 콘에어코리아트레이딩 주식회사 서울시 성동구 성수동 308-4 서울 숲 코모름 디지털 타워 2002호 소비자 상담실 : 1899-0209 www.vidalsassoon.kr
