



Instruction Booklet 사용설명서



22MM CERAMIC STRAIGHTENER 22MM 세라믹 스트레이트너

VS2039BK

salon tools

VS SASSOON 22MM CERAMIC STRAIGHTENER

The VS SASSOON Ceramic Straightener has high heat performance and ceramic plates to glide through the hair for fast, easy styling. It has worldwide-voltage for use at home or anywhere around the world.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.


1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety.



Children should be supervised to make sure they do not treat the unit like a toy.

11. Allow the unit to cool before storing.
12. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
13. Before plugging in, read the information about worldwide voltage contained in the operating instructions section of this manual.
14. Do not use with a voltage converter.

FEATURES

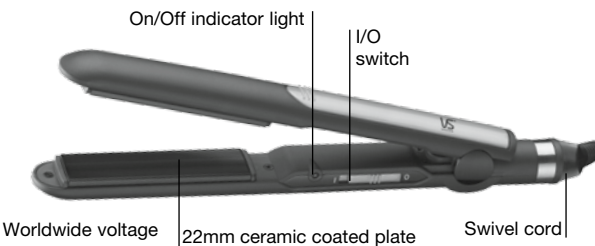

- Up to 215°C salon temperature performance
- Fast heat-up
- 22MM ceramic coated plates
- Floating plate for even pressure
- I/O switch
- On/Off indicator light
- Worldwide-voltage for worldwide use
- Swivel cord

OPERATING INSTRUCTIONS

This straightening iron appliance is intended for household use. This unit is designed to operate at 100–240 volts AC. Use on Alternating Current (50-60 hertz) only.

WORLDWIDE VOLTAGE

This straightening iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

STRAIGHTENING BASICS

1. Plug the straightening iron cord into any household outlet (100–240V). Slide the I/O switch to I position. The iron will heat up very quickly. The power indicator light will remain on when in operation. To turn off, slide switch to O position (light will go off). Never leave your straightening iron on and unattended.
- WARNING:** The straightening iron's plates will get very hot within a few seconds and should not be placed in contact with the skin after the straightening iron has been turned on. Hair should be clean and completely dried before using any straightening iron.

2. Start with a hair section that is 2 in. wide and no more than 1/2 in. thick. Open the iron and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward the end of hair. For best results, use a light styling product before blow-drying hair. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this straightening iron. After using iron several times, you will learn the ideal way to straighten and style your hair easily.

MAINTENANCE

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

However, in order to keep the best performance from your straightening iron all the time, please note the following care instructions.

- Do not scratch the surface of the plates with sharp objects or wipe with coarse material.
- Do not use this straightening iron with strong chemicals, like perm lotions.
- Do not clean the plates with strong cleaning agents. In most cases, mild detergent will be able to remove any stains or traces of styling products left on the plates easily.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	9/1/2011
Customer	VS-KOREA
Model No.	VS2039BK
Description	IB
Job No.	11VS00189
Reference No.	IB-11/262
Revision No.	3
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Cherry Long
Approved by	Jimmy Ng/Liam Lee
Vendor	MILLPLAN
Supplier	



수입 판매원
콘에어 코리아 트레이딩
서울시 성동구 성수동 308-4 서울 숲 코오롱 디지털
타워 2002호
비달사순 고객 서비스센터
080-700-9390
www.vidalsassoon.kr

Conair Far East Ltd.,
A Subsidiary of Conair Corporate USA Conair Corporation USA,
1 Cummings Point Road, Stamford, Connecticut 06902 USA
www.toolsofsassoon.com

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair Corporation.

VS2039BK

IB-11/262

折疊方法
Folding method:
12 pages (6 x 2)



비달사순 22MM 세라믹 스트레이트너

비달사순 세라믹 스트레이트너는 최고 215°까지의 예열 기능과 세라믹 열판으로 모발에 빠르고 편리하게 미끄러지듯이 스타일링 하실 수 있습니다. 전 세계 사용 가능한 전압으로 언제 어디서나 사용이 가능합니다.

주요 안전 주의사항

제품 사용 시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하셔야 합니다.

사용 전 반드시 사용설명서를 숙지하여 주십시오. 물에 접촉하거나 빠뜨리시면 안됩니다.

안전주의

경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않는 안전한 곳에 두십시오. 유아 및 어린이 침대, 유모차, 어린이 놀이지역 안에서는 절대 사용하지 마십시오. 포장재는 장난감이 아닙니다. 얇은 막 물질이 코나 입에 붙어 유아나 어린이가 질식 될 수 있습니다.



경고: 이 제품을 욕조, 샤워장, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.



- 부득이 물이 있는 곳에서 사용하실 경우 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져있더라도 물 근처에서 사용하시면 위험합니다. 보다 안전한 사용을 위하여 욕실의 잔류전류 용량은 30mA이하여야 합니다. 욕실 등에서 사용 시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
- 물 또는 액체에 절대로 빠뜨리시면 안 됩니다.
- 전원코드가 손상되었을 경우 사용을 중단 하시고 비달사순 A/S 센터에서 반드시 수리를 받으셔야 안전합니다.
- 제품을 떨어뜨리거나, 제품이 손상된 것처럼 보일 경우 사용을 중단하십시오.
- 전원을 연결하거나 스위치를 켜 상태에서 제품을 보관하지 마십시오.
- 사용상에 문제가 발생하면 즉시 전원을 끄십시오.
- 제조업체가 공급하는 부품 외의 부품은 사용하지 마십시오.
- 제품 사용 후나 제품세척 전에는 반드시 전원을 끄십시오.
- 기기의 고온표면이 피부(특히 귀, 눈, 얼굴 및 목 부위)에 닿지 않도록 주의하셔야 합니다.
- 본 제품은 영, 유아, 어린이 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용 되어서는 안 되며, 사용시엔 반드시 안전을 책임지는 보호자의 지도로 사전 사용설명교육 후 사용하도록 합니다. 특히 어린이가 장난감처럼 사용 하지 않도록 각별히

주의해 주십시오.

- 제품 보관 시에는 반드시 기기의 열기가 식은 상태에서 보관 하도록 합니다.
- 전원코드의 손상을 막기 위해 꼬거나 구부러져 보관하지 말아 주십시오.
- 사용전, 전 세계 전압 사용 내용과 함께 사용 설명서를 숙지 하십시오.
- 전압 변환기 와 함께 사용하지 마십시오.

제품 특징



- 최고 215° 전문가 수준의 예열
- 빠른 예열기능 60초 내 사용가능
- 22MM 세라믹 코팅 열판
- 최대 압력을 위한 편리한 고압 이동식 열판
- I/O 스위치
- 전원 활성화 지시등
- 전 세계 전원 사용 가능
- 회전식 코드

사용방법

본 제품은 가정용으로 제작 되었습니다. 본 제품의 사용은 100~240 볼트 AC이 적합하며 50~60 hertz의 전기 교류에서만 사용하십시오.

전세계 전압 사용 가능

본 제품은 자동으로 전압이 조정 됩니다. 적당한 아답터를 사용 하여 전원 입구에 맞게 사용 합니다.

스트레이트 방법

- 스트레이트에 전원을 100V~240V에 맞는 전원에 연결하도록 합니다. 슬라이드 스위치를 “I”에 위치하여 전원이 켜진 상태를 붉은 지시 등이 켜집니다. 본 제품은 빠르게 예열 됩니다. 전원 차단을 위해서는 슬라이드 버튼을 “O”에 위치 합니다. (붉은 지시등이 꺼집니다). 붉은 지시 등을 끄고 코드를 뽑아 주십시오. 이 때 다른 물건과 함께 보관하지 않도록 합니다.**주의:** 본 제품은 순간간에 뜨거워 질 수 있습니다. 제품의 전원이 꺼진 상태 에서도 피부표면에 접촉하지 않도록 합니다.

- 머리를 스타일 하기 편리한 적당한 상태로 구분합니다.
- 적당히 약 일 인치 정도의 모발을 잡습니다.
- 모발을 열 판에 놓고 열 판을 닫도록 합니다.
- 이때 모발을 팽팽하게 잡아당기면서 한 손은 손잡이를 잡고 한 손은 열 판 위의 본체를 잡아 두 손으로 천천히 내려서 스타일링 합니다.
- 다음 본체를 잡았던 손에 힘을 빼고 모발 끝으로 자연스럽게 내리도록 합니다.
- 원하는 스타일에 따라 필요하다면 반복 하도록 합니다
- 원하는 스타일을 자연스럽게 연출 하기 위해서는 약간의 연습이 필요 합니다.
- 사용 후에는 전원을 끄고 플러그를 분리한 후 완전히 차가운 상태에서 보관하도록 합니다.

사용자 주의 사항

- 본 제품은 별도의 유지 보수를 필요로 하지 않습니다. 윤활유 첨부를 필요로 하지 않습니다. 적절한 사용을 위해서는 제품을 반드시 깨끗한 상태로 유지 하여야 합니다. 청소가 필요한 경우, 전원을 끄고 제품이 차가워진 상태에서 마른 수건을 이용하여 닦아서 청소합니다. 만일 코드 또는 제품의 파손으로 작동 되지 않을 시에는 플러그 분리하고 제품을 차갑게 한 후 비달사순 서비스 센터로 연락 하시어 수리하십시오. 소비자가 직접 제품을 수리하려 시도 하지 마십시오. 제품의 상태를 최상으로 유지하기 위해서는 다음사항을 준수하시기 바랍니다.
- 날카로운 물건으로 기기표면을 긁거나 거친 표면의 제품으로 닦지 마십시오.
 - 파마약과 같은 강한 화학물질과 함께 사용하지 마십시오.
 - 강한 세척제품으로 표면을 닦지 마세요. 순한 세제만으로도 기기표면에 잔재해 있는 대부분의 얼룩이 쉽게 제거됩니다.

위험

절대로 전선을 잡아당기거나 끄는 등 심하게 구부리지 마시고 전선으로 기기를 너무 단단히 감지 마세요. 이는 전선의 손상 및 파열, 합선문제를 발생시킬 수 있습니다. 전선을 수시로 확인하시고 손상됐을 시엔 제품사용을 즉시 중단하시기 바랍니다.

보관

제품을 사용하지 않을 때는 반드시 전원을 안전 하게 분리하고 제품을 차갑게 한 후 어린이의 손이 닿지 않는 안전하고 건조한 곳에 보관하십시오. 전원에서 분리할 때는 감자기 잡아당기거나 너무 팽팽하게 전선을 잡아당기지 마시고 전선으로도 제품을 감지 마십시오. 제품의 연결부위의 전선을 끈게 유지하여 자연스럽게 걸어두거나 놓아두도록 합니다.

제품 품질 보증서

성 명	
전화번호	/휴대폰번호
e-mail	
주 소	
구입일자(년/월/일)	
모델번호(사용설명서 앞면 표기)	
대리점명(구입처)	

■ 주의사항

- 서비스를 받고자 하실때는 이 보증서와 구입 영수증을 제시하여 주십시오.
- 제품 구입일자가 고쳐지거나, 지워졌을 경우에 본 보증서는 무효입니다.
- 이 보증서를 분실하실 경우, 재발행되지 않습니다.

본 보증서는 보관하십시오

■ 품질 보증의 조건

- 본 제품의 품질보증 기간은 구입 일자로부터 2년간 입니다.
- 일상적인 사용에 의한 제품의 마모나, 마멸 또는 천재지변에 의한 제품의 손상 및 사용 설명서 상의 주의사항을 따르지 않고 임의로 사용하거나, 취급부주의로 인한 고장 등에 대해서는 본 보증서에 의한 무상 서비스를 받을 수 없습니다.
- 품질 보증서 상의 보증기간 내에는 제조상 또는 제질상의 결함으로 발생한 불량 등 에 대하여 무상 서비스를 받을 수 있으며 폐사의 판단에 따라 부품의 교환 또는 제 품의 교환도 가능합니다.
- 본 보증서의 효력은, 품질 보증서와 보증 등록서상의 대리점의 판매 확인과 제품구 입 후 4주 이내 보증등록서가 고객 서비스 센터에 우송 되었을 때로부터 발생 합니 다.
- 본 제품 품질보증은 수입판매원의 관할 이외 지역과 적법하게 위임 받지 않은 판매 처의 보증일 경우 효력을 상실합니다.

서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

수입 판매원
콘에어 코리아 트레이딩
서울시 성동구 성수동 308-4 서울 숲 코오롱 디지털 타워 2002호
비달사순 고객 서비스센터
080-700-9390
www.vidalsassoon.kr