



Instruction Booklet 사용설명서



AC PRO IONIC TWIST DRYER

VSD270RK

Magic Shine

AC PRO IONIC TWIST DRYER

A dryer with a twist...it is compact, sleek, shiny and powered by AC motor.

You'll love being able to twist and fold the handle down for super compact storage making this dryer ideal for travel. The real twist is in the powerful airflow the AC motor can produce, drying your hair much faster than standard dryers.

On top of that there is the true cool shot to help you cool down and set your style, Ionic Conditioning Technology to reduce frizz and shine and the super slim concentrator for precision blow drying.



FEATURES:

1. AC motor
2. 1600W
3. Twist handle
4. Ionic conditioning technology
5. Rear filter
6. 2 heat/speed settings
7. True cold shot button
8. Concentrator

GENERAL

1. Plug the appliance into a suitable mains socket.
2. Wash and condition your hair as usual.
3. Always towel-dry hair before using the dryer.
4. There are 2 heat/speed settings, plus the true cool shot.
 - a. Use the high heat and speed setting for initial drying. The highest setting is ideal for thick or hard to style hair.
 - b. Use the low heat and speed setting as the hair begins to dry

and for styling and scrunch drying. The low heat is also best for fine or damaged hair.

5. Use the cold shot on warm hair to rapidly cool the hair and set the style in place for a longer-lasting effect.

THE ATTACHMENTS:

Ultra-slim Concentrator -

Use the concentrator for directing airflow just where you want it, to ease styling and straightening.

For additional styling control or for fine hair types use the lowest fan speed setting (with concentrator in place) and point the airflow along the surface of the hair to be dried.

CAUTION: Take care not to direct the airflow directly onto the skin (e.g. scalp, neck, ears, face, etc.) as hot air from hairdryers can, particularly if held too close, cause discomfort or even burns.

IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution add to the build-up of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels. This static charge causes the scales, or cuticles of the hair, to push hair strands apart, resulting in a rough hair surface. Consequently, hair may have a dull appearance.

High levels of static charge cause hair to become 'flyaway' and difficult to style. The advanced internal ionic generator conditions hair by emitting negative ions to reduce static, by leaving hair silky and shiny with reduced frizz.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom

a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.

2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. When using the unit, make sure the unit's air vent is not blocked. Make sure there is no hair or any other dirt obstructing the unit's rear filter.
5. This unit has been equipped with a temperature cut-out. If the unit overheats, it will shut off automatically or will stop heating. If this happens, slide the switch on the unit's handle into the OFF position, unplug the unit and allow it to cool for 10 minutes. BEFORE using it again, make sure there is no hair or any other dirt in the unit's rear filter. Plug the unit in and switch it on. If it overheats again, stop using it immediately, switch it off and unplug it. Return the unit to the VS SASSOON service centre.
6. Do not use the unit if it has fallen or if it appears to be damaged.
7. Do not leave the unit unattended when it is plugged in or switched on.
8. Unplug the unit immediately if you have problems when using it.
9. Do not use any accessories other than those recommended by manufacturer.
10. Unplug the unit after each use and before cleaning it.
11. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
12. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
13. Allow the unit to cool before storing.
14. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean.

Blocked or clogged air intake vents will cause the dryer to overheat. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only.

If overheating occurs, an automatic safety device will shut down the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

Never allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

If the cord or dryer is damaged or does not operate properly, return it for repair to the VS Sassoon Service Centre. No repairs should be attempted by the consumer.

STORAGE

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer.

THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.



수입 판매원

콘에어코리아트레이딩주식회사
서울시성동구성수이로 66
서울숲드림타워 1304 ~ 1306호

A/S 대표 번호 : 1899-0209

자사의 A/S 전문대행업체인 필일렉 www.fillelec.co.kr
의 홈페이지를 통해서
가까운 A/S센터(전국 38개점)를 확인하세요

Conair Far East Ltd.,
A Subsidiary of Conair Corporate USA Conair Corporation USA,
1 Cummings Point Road, Stamford, Connecticut 06902 USA
www.toolsofsassoon.com

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair Corporation.

VSD270RK

IB-16/215

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	6/13/16
Customer	VS-KOREA
Model No.	VSD270RK
Description	IB
Job No.	16VS063
Reference No.	IB-16/215
Revision No.	0
Color	1C (BLACK) + 1C (BLACK)
Open Size	552mm(W) x 214mm(H)
Folded Size	92(W)mm x 214(H)mm
Material	80gsm Artpaper
Prepared by	Carlos Ho
Approved by	Jimmy Ng/Elodie Lee
Vendor	Yueli
Supplier	

折疊方法
Folding method:
12 pages (6 x 2)





Instruction Booklet 사용 설명서



AC PRO IONIC TWIST DRYER

VSD270RK

Magic Shine

AC 프로 이온 트위스트 접이식 드라이어

트위스트 접이식 드라이어로 보관 및 여행용으로 편리하게 사용할 수 있으며, 강한 풍량을 자랑하는 AC 모터 드라이어입니다. 강한 풍량과 쿨샷 냉풍 기능으로 보다 빠르게 모발 건조 시간을 단축 할 수 있을 뿐만 아니라 모발 보호 및 스타일링 고정에 효과적입니다.

또한 이온 컨디셔닝 테크놀로지를 통해 모발의 곱슬거림을 줄일 뿐만 아니라 빛나고 윤기있는 머릿결을 유지 할 수 있습니다.




제품 특징

1. AC 모터
2. 1600W
3. 트위스트 핸들
4. 이온 컨디셔닝 테크놀로지
5. 탈부착 가능 필터
6. 2단계 풍온/풍속 조절
7. 강한 쿨샷 냉풍 버튼
8. 집중 노즐

사용 방법

1. 콘센트에 드라이어의 플러그를 꽂아 줍니다.
2. 샴푸 및 컨디셔너를 사용하여 모발을 감은 후, 드라이기를 사용합니다.
3. 드라이기 사용 전 모발을 항상 타월로 건조시켜 줍니다.
4. 모발 상태에 따라 2단계 풍온/풍속, 냉풍 기능을 설정하여 사용합니다.
 - a. 가장 높은 풍온 및 풍속으로 드라이를 시작합니다. 가장 높은 온도는 굵은 모발 또는 스타일링이 어려운 모발에 적합합니다.
 - b. 어느 정도 건조 된 모발이나, 컬링 연출 등 스타일링시에는 낮은 풍온 및 풍속을 권장합니다. 특히 손상된 모발이나 가는 모발에는 가장 낮은 온도가 적합합니다.
5. 단시간에 모발을 식혀주거나 완성된 스타일링을 오랫동안 고정 및 유지하고자 할 때에는 쿨샷기능을 사용하기 바랍니다.

집중 노즐

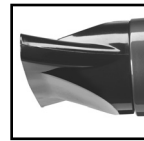

스타일링을 원하는 곳에 집중 노즐을 대고 드라이하시기 바랍니다. 추가적인 스타일링이나 약한 모발의 스타일링 시에는 모발의 결을 따라 가장 낮은 풍속으로 설정하여 드라이를 해줍니다.

주의: 두피, 목, 귀, 얼굴 등의 직접적인 피부의 드라이기 사용은 화상 등의 우려가 있으니 피하시기 바랍니다.

이온 테크놀로지

현대 생활의 다양한 에어컨 바람, 인공 섬유 접촉, 환경 오염 등은 특히 모발의 정전기 발생에도 영향을 미치게 되며, 헤어 브러쉬 및 타월 사용은 정전기 발생을 높여줍니다. 이로 인해 비듬, 큐티클 등이 증가하고 머릿결이 갈라지는 등의 모발 손상에도 영향을 미치게 됩니다. 특히, 심한 정전기 발생은 머리가 날리는 등 헤어 스타일링에도 영향을 미치게 됩니다. 음이온 제네레이터는 이러한 정전기, 모발의 곱슬거림 등을 줄여 주어 부드럽고 빛나는 모발을 유지하는데 도움을 줍니다.

안전 주의 사항

제품 사용시, 특히 어린이가 있을 경우 다음의 안전 주의 사항을 반드시 준수 하셔야 합니다.

사용 전 반드시 사용 설명서를 숙지해 주십시오. 물에 접촉하거나 빠뜨리시면 안됩니다.

주의사항

경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않도록 주의해 주십시오. 이 포장재를 유아용 침대, 유모차 또는 유아용 놀이공간 등에서 사용하지 마십시오. 얇은 필름으로 인해 유아가 질식될 수 있습니다



경고: 이제 품을 욕조, 샤워기, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오



1. 화장실에서 사용할 경우, 사용 후 반드시 플러그를 빼주십시오. 제품의 전원이 차단되어 있어도 물이 닿을 경우 위험할 수 있으니 안전을 위해 화장실에 누전차단기 설치를 권장합니다.
2. 물 또는 액체에 절대 빠뜨리지 마십시오.
3. 전원코드가 손상되었을 경우 A/S 센터에서 반드시 수리를 받으셔야 안전합니다.
4. 드라이기 공기 흡입구가 막히지 않도록 주의 하십시오. 드라이기 필터 속으로 모발 및 이물질이 들어가지 않도록 주의 하십시오.
5. 기기가 과열된 경우 자동적으로 꺼집니다. 이런 경우가 발생했을 경우, 스위치를 'off' 에 두고 플러그를 뽑은 후 10분간 기기를 식혀주십시오. 다시 사용하기 전, 모발 및 다른 이물질이 기기 필터 속으로 들어가지 않도록 주의 하십시오. 플러그를 꽂은 후 스위치를 켭니다. 만약, 기기가 재작동하지 않는다면 즉시 사용을 멈추고 스위치를 'off' 후 플러그를 뽑아주십시오. 그 후, 바비리스 서비스 센터에 문의 하시기 바랍니다.
6. 제품에 강한 충격이 가해졌거나 이상이 있을 경우, 사용하지 마십시오.
7. 스위치를 켜두거나 플러그를 꽂아둔 상태에서 자리를 비우지 마십시오.
8. 사용 중 문제가 생기면 바로 플러그를 뽑으십시오.

9. 본 매뉴얼에 기술된 목적으로만 본 제품을 사용하며 제조사에서 권고하지 않은 부속품을 사용하지 않습니다.

10. 제품 사용 후나 청소 하기 전 반드시 플러그를 뽑으십시오.

11. 열판의 표면이 뜨거우니 제품이 귀나 눈 등 피부에 직접 닿지 않도록 합니다.

12. 아이들이나 움직임이 불편한 사람, 제품에 대한 지식이 없는 사람 등은 사용을 자제합니다. 특히 아이들이 본 제품을 장난감처럼 다루지 않도록 합니다.

13. 열을 식힌 후 보관 하십시오.

14. 코드 손상을 막기 위해 코드를 제품에 감지 마시고, 꼬이거나 접히지 않도록 보관합니다.

사용시 주의사항

이 기기는 윤활유 첨부를 필요로 하지 않습니다. 적절한 사용을 위해 항상 깨끗한 상태로 유지하십시오. 막힌 공기 투입구는 드라이 시 과열 원인이 됩니다. 세척이 필요한 경우, 전원을 차단하고 공기 투입구를 개봉 후 작은 브러시를 이용하여 먼지와 이상 물질을 제거합니다. 드라이기의 다른 측면의 표면은 젖은 천으로 닦아서 청소합니다. 만일 과열될 경우, 전원이 자동으로 차단되어 작동이 중지되며 제품 손상을 예방하고 부상을 방지합니다. 제품이 자동 전원 차단될 경우 전원을 차단하고 플러그를 분리 후 제품을 10-15 분 정도 식힌 후 다시 사용하도록 합니다. 사용 전 반드시 공기 투입구의 청소 상태를 확인 하십시오.

주의

코드에 생긴 손상이 제품 전체에 영향을 끼칠 수 있으니 코드를 잡아당기거나 꼬거나 구부리지 마시고 제품에 단단히 감지 마십시오. 코드 혹은 제품의 손상이 눈에 보이거나 제품 작동에 이상이 생길 경우 즉시 사용을 중단합니다.

보관 방법

기기를 사용하지 않을 때에는 코드를 뽑아 안전한 곳, 아이들의 손이 닿지 않는 곳 건조한 곳에 보관합니다. 코드를 꺼거나 기기에 감지 마십시오.

제조일 표기

제조일은 본제품에 WWYXXX 형태로 표기되어 있습니다. W는 '몇째주' , Y는 '몇년도' 를 나타냅니다.

제품 품질 보증서

성명	
전화번호	/휴대폰번호
e-mail	
주소	
구입일자(년/월/일)	
모델번호(사용설명서 앞면 표기)	
대리점명(구입처)	

■ 주의사항

- 서비스를 받고자 하실때는 이 보증서와 구입 영수증을 제시하여 주십시오.
- 제품 구입일자가 고쳐지거나, 지워졌을 경우에 본 보증서는 무효입니다.
- 이 보증서를 분실하실 경우, 재발행되지 않습니다.

본 보증서는 보관하십시오

■ 품질 보증의 조건

- 본 제품의 품질보증 기간은 구입 일자로부터 2년간 입니다.
- 일상적인 사용에 의한 제품의 마모나, 마멸 또는 천재지변에 의한 제품의 손상 및 사용 설명서 상의 주의사항을 따르지 않고 임의로 사용하거나, 취급부주의로 인한 고장 등에 대해서는 본 보증서에 의한 무상 서비스를 받을 수 없습니다.
- 품질 보증서 상의 보증기간 내에는 제조상 또는 제철상의 결함으로 발생한 불량 등에 대하여 무상 서비스를 받을 수 있으며 폐사의 판단에 따라 부품의 교환 또는 제품의 교환도 가능합니다.
- 본 보증서의 효력은, 품질 보증서와 보증 등록서상의 대리점의 판매 확인과 제품구입 후 4주 이내 보증등록서가 고객 서비스 센터에 우송 되었을 때로부터 발생 합니다.
- 본 제품 품질보증은 수입판매원의 관할 이외 지역과 적법하게 위임 받지 않은 판매처의 보증일 경우 효력을 상실합니다.

서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.
