



### Instruction Booklet 사용설명서



### 2000W POWER BLACK & ROSE DRYER

VSD120K

# salon tools

### 2000W POWER BLACK & ROSE DRYER

Powerful and fast drying, well balanced and lightweight. The 2000W DRYER is an essential tool for all hair types.

#### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

#### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. When using the unit, make sure the unit's air vent is not blocked. Make sure there is no hair or any other dirt obstructing the unit's rear filter.
5. This unit has been equipped with a temperature cut-out. If the unit overheats, it will shut off automatically or will stop heating. If this happens, slide the switch on the unit's handle into the OFF position, unplug the unit and allow it to cool for 10 minutes. BEFORE using it again, make sure there is no hair or any other dirt in the unit's rear filter. Plug the unit in and switch it on. If it overheats again, stop using it immediately, switch it off and unplug it. Return the unit to the CONAIR service centre.
6. Do not use the unit if it has fallen or if it appears to be damaged.
7. Do not leave the unit unattended when it is plugged in or switched on.
8. Unplug the unit immediately if you have problems when using it.
9. Do not use any accessories other than those recommended by manufacturer.
10. Unplug the unit after each use and before cleaning it.
11. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
12. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised

- or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
13. Allow the unit to cool before storing.
  14. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

#### GET TO KNOW YOUR DRYER



#### HOW TO USE THE CONCENTRATOR NOZZLE

The concentrator nozzle is great for straightening or styling hair with a brush. Use the professional concentrator nozzle for directing the air just where you want it. For additional control use one of the lower settings and point the air-flow along the surface of the hair to be dried.

#### COOL SHOT BUTTON

Use the cool shot button on warm hair to set the wave or curl in place for a really long lasting effect.

#### STYLING TIPS

#### VOLUME

Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

#### STRAIGHTENING

Create a smooth straight look by using your dryer with the ultra-slim concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

#### REFRESH

Refresh your style by giving the roots a quick blast of hot air & finish with the cool setting for the best results.

#### EXPERT TIP

Set your style by finishing with the cool shot or setting. Finish with a spritz of light hold hair spray, for extra hold if needed.

#### CLEANING THE FILTER

- Ensure the appliance is switched off, unplugged and cool.
- Hold the handle of the dryer and turn the filter cover away from the dryer in counterclockwise direction.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the filter cover by turning back into position in clockwise direction.

#### IMPORTANT!

This appliance should only be used as described within this instruction booklet. Please retain for reference.

#### OPERATING INSTRUCTIONS

- Wash, condition and towel dry your hair
- Make sure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
- There are 3 heat/2 speed settings.
- Use the high heat and high speed setting for initial drying or drying thick, hard to dry hair.
- Switch to the low speed setting as the hair begins to dry and for styling and scrunch drying.
- If your hair is very fine and damaged, it may be best to use the low heat setting.
- To finish, use the cool shot button to rapidly cool the hair and set the style in place.
- After use, switch off and unplug the appliance. Allow to cool before storing away.

#### USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. Blocked or clogged air intake vents will cause the dryer to overheat. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only.

#### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

#### STORAGE

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer.

#### THE DATE CODE MENTIONED

WVYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.



#### 수입 판매원

콘에어코리아트레이딩 주식회사  
서울시 성동구 성수이로 66  
서울숲드림타워 1304 ~ 1306호  
소비자 상담실 : 1899-0209  
www.vidalsassoon.kr

Conair Far East Ltd.,  
A Subsidiary of Conair Corporate USA Conair Corporation USA,  
1 Cummings Point Road, Stamford, Connecticut 06902 USA  
www.toolsofsassoon.com

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under license by Conair Corporation.


VSD120K

IB-17/091

### CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	06/08/2017
Customer	VS-CKTL
Model No.	VSD120K
Description	IB
Job No.	17VS019
Reference No.	IB-17/091
Revision No.	2
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Carlos Ho/Penny Peng
Approved by	Jimmy Ng
Vendor	Yueli
Supplier	

折叠方法  
Folding method:  
12 pages (6 x 2)

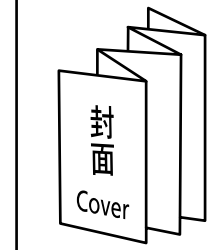

### 2000W 파워 블랙엔로즈 드라이어

2000W 파워 블랙엔로즈 드라이어는, 2000W의 강력한 파워로 모발을 빠르게 건조 시킬 수 있으며 3단계 온도 / 2단계 속도 조절이 가능합니다. 바쁜 아침 시간, 비달사순 제품으로 드라이 시간을 단축시켜 보세요.

### 주요 안전 주의사항

제품 사용시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하여야 합니다.

### 사용 전 반드시 사용설명서를 숙지하여 주십시오. 물에 접촉하거나 빠뜨리면 안됩니다.

### 안전주의

**경고:** 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않도록 주의해 주십시오. 이 포장재를 유아용 침대 혹은 유아차 등에서 사용하지 마십시오. 얇은 막이 코나 입에 붙어 유아가 질식될 수 있습니다. 포장재는 장난감이 아닙니다.

**경고:** 이 제품을 욕조, 샤워기, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.

- 부득이 물이 있는 곳에서 사용하실 경우 사용 후 반드시 플러그를 뽑으십시오. 전원 스위치가 꺼져 있더라도 물 근처에서 사용하면 위험합니다. 안전한 사용을 위하여 욕실의 잔류전류 용량은 30mA 이하여야 합니다. 보다 더 안전한 사용을 위하여 욕실에 누전 차단기를 설치할 것을 권장합니다. 욕실 등 물이 있는 장소에서 사용 시 위 사항을 참조하여 전문가와 상의 후 사용하십시오.
- 물 또는 액체에 절대로 빠뜨리면 안됩니다.
- 전원코드가 손상되었을 경우 A/S 센터에서 반드시 수리를 받으셔야 안전합니다.
- 제품 사용시 제품의 통풍구가 막히지 않았는지 확인 후 사용하십시오. 또한 제품후면의 흡입구가 먼지나 머리카락으로 막혀있지 않은지 확인하신 후 사용하십시오.
- 본 제품에는 온도 조절장치가 장착되어 있습니다. 만약 제품의 온도가 지나치게 상승하게 되면, 온도 조절장치에 의해 자동으로 전원이 꺼지거나 열이 더 이상 공급되지 않게 됩니다. 이와 같이 자동으로 꺼지는 일이 발생할 경우는 스위치를 끄시고 전원코드를 뽑으신 후 흡입구가 먼지나 모발에 의해 막히지 않았는지 확인하시고 약 10분 정도 기다리신 후 다시 사용하기 바랍니다. 플러그와 스위치를 다시 작동시킨시 후 사용해 보시고 이런 일이 다시 발생할 경우 즉시 사용을 중단하시고, A/S센터에 연락하십시오.
- 제품을 떨어뜨리거나, 제품이 손상된 것처럼 보일 경우 사용을 중단하시고 A/S센터에 연락하시기 바랍니다.
- 전원을 연결하거나 스위치를 켜 상태에서 제품을 보관하지 마십시오.
- 제품 사용 중 문제가 있을 경우 즉시 플러그를 뽑아 주십시오.
- 제조업체가 공급하는 부속품 외의 부속품을 사용하지 마십시오.

- 제품 사용 후나 제품 세척 전에 반드시 플러그를 뽑으십시오.
- 피부, 특히 귀, 눈, 목 등이 제품의 뜨거운 열판 송풍구에 닿지 않도록 각별히 주의하셔야 합니다.
- 본 제품은 영유아, 어린이, 심신 약약자, 심신 상실자, 정신 질환자 등에 의해 사용되어서는 안되며, 사용 시에는 반드시 보호자의 보호가 필요합니다. 특히 어린이가 장난감처럼 사용하지 않도록 각별히 주의하여 주십시오.
- 제품 보관 시 반드시 제품을 식혀 주십시오.
- 전원코드의 손상을 막기 코드를 위해 꼬거나 구부러 보관하지 않도록 합니다.



### 집중 노즐 사용

집중 노즐은 드라이기의 바람을 한 곳에 집중시키는 역할을 하는 장치입니다. 드라이기로 스트레이트닝이나 볼륨 웨이브 스타일을 연출 할 때, 집중 노즐을 드라이기에 부착하여 사용하십시오. 이 때 저온 / 저속에 맞추어 스타일링 할 것을 권장합니다. 드라이기 사용에 익숙해 지면, 사용자에 따라 고온/ 고속에 맞추어 사용하기 바랍니다. 자세한 스타일링 방법은 아래 ‘스타일링 팀’을 참조하십시오.

### 쿨샷 버튼 (냉풍 버튼)

쿨샷 버튼을 눌러 열이 가해진 모발에 냉풍을 가해 웨이브를 고정시키면, 스타일이 오랫동안 지속됩니다.

### 스타일링 팀

#### 볼륨 및 웨이브 연출

풍성한 뿌리 볼륨을 연출 할 때에는 정수리쪽의 모발을 적당한 잡아, 얼굴을 덮도록 아래 방향으로 내려줍니다. 내려 준 모발 아래에 라운드 브러시를 밀착시켜 모발을 감고, 그 위에 드라이기

바람을 모발 뿌리 부분부터 아래쪽으로 쐬어 주십시오. 볼륨을 원하시는 곳에 같은 동작을 반복하십시오.

### 스트레이트닝

라운드 브러시 위에 적당량의 모발을 놓고, 그 위에 드라이기 노즐을 밀착시켜 바람을 쐬어 줍니다. 이 때, 아래 방향으로 쓸듯이 부드럽게 내려주며 스트레이트닝 합니다.

### 생기있는 스타일 연출

드라이기로 뿌리 볼륨을 살리고 냉풍으로 스타일링을 고정하여 생기 있는 스타일을 연출해 보십시오.

### 전문가 팀

쿨샷 버튼을 눌러 모발에 냉풍을 가해 스타일링을 고정시킨 후, 헤어 스프레이와 같은 헤어 제품으로 스타일링을 마무리합니다.

### 필터 청소

- 전원이 꺼져 있는지 확인 후 플러그를 뽑고 기기를 식혀줍니다.
- 한쪽 손으로 핸들을 단단히 잡고, 다른 한 손으로 드라이 뒷면의 필터를 시계 반대 방향으로 돌려 빼냅니다.
- 부드러운 빗솔로 필터에 끼어 있는 모발이나 먼지를 제거합니다.
- 필터를 시계 방향으로 돌려 자리에 맞게 끼웁니다.

### 중요 사항

본 제품 사용 안내서에 기재된 안내에 따라 제품을 사용하십시오. 사용 안내서는 계속 보관하시어 참고하시기 바랍니다.

### 사용법 안내

- 머리를 감은 후 타월로 물기를 닦아 냅니다.
- 드라이기의 플러그를 연결 하기 전, 스위치를 off(‘0’)에 맞춥니다.
- 본 제품은 3단계 온도/ 2단계 풍속 조절이 가능합니다.
- 먼저 고온/고속에 세팅하여 모발을 건조시킵니다.
- 모발이 건조되기 시작하면 저온/저속에 세팅 하여 스타일링 합니다.
- 가늘거나 손상된 모발에는 저온/저속이 적절합니다.
- 쿨샷 버튼을 눌러 열이 가해진 모발에 냉풍을 가해, 결이나 웨이브를 고정시켜 줍니다.
- 사용 후 전원을 끄고 플러그를 뽑아 열을 식혀 보관해 주십시오.

### 사용시 주의사항

본 제품은 별도로 유지 보수를 필요로 하지 않습니다. 또한 윤활유를 필요로 하지 않습니다. 제품을 잘 활용하기 위해서는 제품을 반드시 깨끗한 상태로 유지 하여야 합니다. 차단되거나 막힌 공기 투입구는 드라이 과열의 원인이 됩니다. 세척이 필요한 경우, 전원을 끄고 열기가 식은 상태에서 공기 투입구를 개봉 후 작은 브러시를 이용하여 먼지와 이상물질을 제거 하도록 합니다. 드라이어의 표면은 젖은 천으로 닦아서 청소 합니다.

### 위험

절대로 전선을 잡아당기거나 꼬는 등 심하게 구부리지 마시고 전선으로 기기를 너무 단단히 감지 마세요. 이는 전선의 손상 및 파열, 합선문제를 발생시킬 수 있습니다. 전선을 수시로 확인하시고 손상됐을 시엔 제품사용을 즉시 중단하시기 바랍니다.

### 제품 보관

제품을 사용하지 않을 때는 반드시 전원을 안전하게 분리한 후 제품의 열을 식힌 후 어린이의 손이 닿지 않는 안전한 건조한 곳에 보관하십시오. 전원에서 분리할 때는 감자가 잡아 당기거나 너무 팽팽하게 전선을 잡아 당기지 마시고 코드로 제품을 감지 마십시오.

### 제조일 표기

제조일은 본 제품에 WYYYYXX 형태로 표기되어 있습니다. W는 ‘ 몇째 주’, Y는 ‘몇 년도’를 나타냅니다.

### 제품 품질 보증서

성 명	
전화번호	/휴대폰번호
e-mail	
주 소	
구입일자(년/월/일)	
모델번호(사용설명서 앞면 표기)	
대리점명(구입처)	

#### ■ 주의사항

- 서비스를 받고자 하실때는 이 보증서와 구입 영수증을 제시하여 주십시오.
- 제품 구입일자가 고쳐지거나, 지워졌을 경우에 본 보증서는 무효입니다.
- 이 보증서를 분실하실 경우, 재발행되지 않습니다.

### 본 보증서는 보관하십시오

### ■ 품질 보증의 조건

- 본 제품의 품질보증 기간은 구입 일자로부터 2년간 입니다.
- 일상적인 사용에 의한 제품의 마모나, 마멸 또는 천재지변에 의한 제품의 손상 및 사용 설명서 상의 주의사항을 따르지 않고 임의로 사용하거나, 취급부주의로 인한 고장 등에 대해서는 본 보증서에 의한 무상 서비스를 받을 수 없습니다.
- 품질 보증서 상의 보증기간 내에는 제조상 또는 제질상의 결함으로 발생된 불량 등 에 대하여 무상 서비스를 받을 수 있으며 메사의 판단에 따라 부품의 교환 또는 제 품의 교환도 가능합니다.
- 본 보증서의 효력은, 품질 보증서와 보증 등록서상의 대리점의 판매 확인과 제품구 입 후 4주 이내 보증등록서가 고객 서비스 센터에 우송 되었을 때로부터 발생 됩니 다.
- 본 제품 품질보증은 수입판매원의 관할 이외 지역과 적법하게 위임 받지 않은 판매 처의 보증일 경우 효력을 상실합니다.

서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

<p><b>수입 판매원</b>  콘에어코리아트레이딩 주식회사  서울시 성동구 성수이로 66 서울숲드림타워 1304 ~ 1306호  소비자 상담실 : 1899-0209  www.vidalsassoon.kr</p>
---