



## Instruction Booklet 사용 설명서



**36MM CURLING IRON**  
**36MM 컬링 아이론**  
**VSCD736K**

# Magic Shine

### 36MM MAGIC SHINE CURLING IRON

To get the best out of your new appliance, please read this user guide carefully before using it for the first time. We also recommend that you keep the instructions for future reference, so that you can remind yourself of the functions of your appliance.

#### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER


#### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before cleaning it.
9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
11. Allow the unit to cool before storing.
12. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

### GET TO KNOW YOUR CURLING IRON

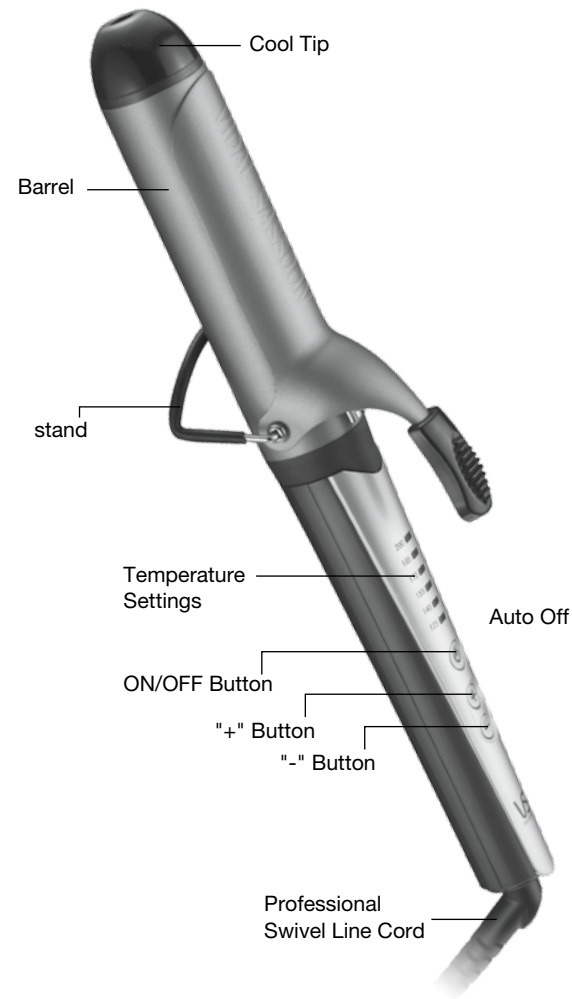

Due to continuing product improvements, the actual product purchased may differ slightly from the one shown in this instruction book.

- Advanced heating component
- "On/off" button
- Adjustable electronic temperature control 125°C 140°C 155°C 170°C 185°C 200°C
- 360 free swivel power cord.
- 60 min auto-off protection

#### Super Styling Guide

#### USE

It's fast heat technology with instant heat 60 seconds to provide styling versatility for all hair type.

### CURLING BASICS

1. plug the curler in any household outlet .
2. Select the desired temperature using the "+", "-", " " button
3. Press the on/off button. The tong will heat up very quickly. Never leave your curling tong on and unattended.
4. The LED indicator light will flash until the programmed temperature has been reached
5. Section damp or dry hair evenly, and comb through before styling. Pressing the spoon button, place curling tong midway up the hair section and spread hair evenly between spoon and barrel. Gently slide curling tong down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember always place the tong on top of a section when making a curl you want rolled under; place the tong under the section when making a flip style.
6. Wind the hair up as far as you want it curled, being careful not to let the tong touch the scalp. Hold in place for 5-8 seconds depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For loose, free-flowing curls, roll more hair.
7. To remove curling tong press the tong button and pull tong away. To "set" the curl, do not comb or brush hair until it cools.
8. After use, press on/off button to turn the heat off.
9. To reactivate the heat, press the button on/off switch again

#### WARNING

The barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling tong is turned ON .The special application of this curling tong will result in an extremely hot barrel when the high setting is chosen.Always do a test curl before using the tong to insure the proper setting for your hair type.

#### CARE AND MAINTENANCE

This appliance is intended for household use. Unplug product before cleaning. The product must be cleaned only when cool. Use a soft non-abrasive cloth that is slightly dampened with water to wipe styling barrel surface. Do not allow water or any other liquid to get into the handle of the iron. Any other servicing should be performed by a qualified service center. The product should not be stored while hot or plugged in. When not in use, allow curling iron to cool, then simply put back in the box and store out of reach of children in safe, dry location. Never wrap the cord around the curling iron. This could cause the cord to wear prematurely and break.

#### MAINTENANCE

Your curling iron is virtually maintenance-free. No lubrication is needed. Keep all openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

However, in order to keep the best performance from your curling iron all the time, please note the following care instructions.

- Do not scratch the surface of the plates with sharp objects or wipe with coarse material.
- Do not use this curling iron with strong chemicals, like perm lotions.
- Do not clean the plates with strong cleaning agents. In most cases, mild detergent will be able to remove any stains or traces of styling products left on the plates easily.

#### IMPORTANT

The warranty does not cover the nano ceramic coating due to natural peeling off after a long period of normal use.

#### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

#### STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

#### THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.



#### 수입 판매원

콘에어코리아트레이딩주식회사  
서울시성동구성수이로 66  
서울숲드림타워 1304 ~ 1306호

소비자 상담실 : 1899-0209  
www.vidalsassoon.kr

Conair Far East Ltd.,  
A Subsidiary of Conair Corporate USA Conair Corporation USA,  
1 Cummings Point Road, Stamford, Connecticut 06902 USA  
www.toolsofsassoon.com

Vidal Sassoon and related logos are trademarks of  
The Procter & Gamble Company used under license by Conair Corporation.


VSCD736K

IB-17/164

CONTINENTAL CONAIR LIMITED  
CHINA CREATIVE DEPARTMENT

Date	06/13/2017
Customer	VS-KOREA
Model No.	VSCD736K
Description	IB
Job No.	17VS049
Reference No.	IB-17/164
Revision No.	0
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Carlos Ho/Penny Peng
Approved by	Jimmy Ng/Elodie Lee
Vendor	Yueli
Supplier	

折叠方法  
Folding method:  
10pages(6x2)

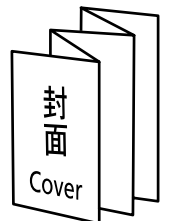

### 36MM 매직샤인 컬링 아이론

제품의 올바른 사용을 위해 사용하기 전 안내 사항을 자세히 읽어보시기 바랍니다. 본 사용 설명서는 제품 기능 등을 계속해서 참고 할 수 있도록 보관하시기 바랍니다.

### 주요 안전 주의 사항

제품 사용 시 특히 어린이가 있을 경우, 다음의 안전주의사항을 반드시 준수하여야 합니다.

### 사용 전 반드시 사용 설명서를 숙지하여 주십시오. 물에 접촉하거나 빠뜨리시면 안됩니다.

#### 안전주의

**경고:** 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않는 안전한 곳에 두십시오. 유아 및 어린이 침대, 유모차, 어린이 놀이지역 안에서는 절대 사용하지 마십시오. 포장재는 장난감이 아닙니다. 얇은 막이 코나 입에 붙어 유아나 어린이가 질식 될 수 있습니다.




**경고:** 이 제품을 욕조, 샤워장, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.



- 부득이 물이 있는 곳에서 사용하실 경우, 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져있더라도 물 근처에서 사용하시면 위험합니다.
- 보다 안전한 사용을 위하여 욕실의 잔류 전류 용량은 30mA 이하여야 합니다. 욕실 등에서 사용 시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
- 물과 같은 액체에 절대 담그지 마십시오.
- 전원 코드가 손상되었을 경우 위험방지를 위해 반드시 서비스센터 에 연락하여 수리를 받으셔야 안전합니다.
- 떨어뜨리거나 손상된 기기는 사용하지 마십시오.
- 플러그가 연결되어 있거나 전원이 켜진 상태로 기기를 방치해두지 마십시오.
- 사용상에 문제가 발생하면 즉시 전원을 끄십시오.
- 제조업체가 공급하지 않는 부품은 사용하지 마십시오.
- 제품 사용 후나 제품 세척 전에는 반드시 전원을 끄십시오.
- 기기의 고온 표면이 피부(특히 귀, 눈, 얼굴 및 목 부위)에 닿지 않도록 주의하셔야 합니다.
- 본 제품은 영, 유아, 어린이 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용 되어서는 안되며, 사용시엔 반드시 안전을 책임지는 보호자의 지도로 사전 사용설명교육 후 사용하도록 합니다. 특히 어린이가 장난감처럼 사용하지 않도록 각별히 주의해 주십시오.

- 제품 보관 시에는 반드시 기기의 열기가 식은 상태에서 보관 하도록 합니다.
- 전원 코드에 손상을 막기 위해 전선으로 기기를 감지 마시고 꼬거나 접힌 상태로 보관하지 마십시오.

### 제품 구성

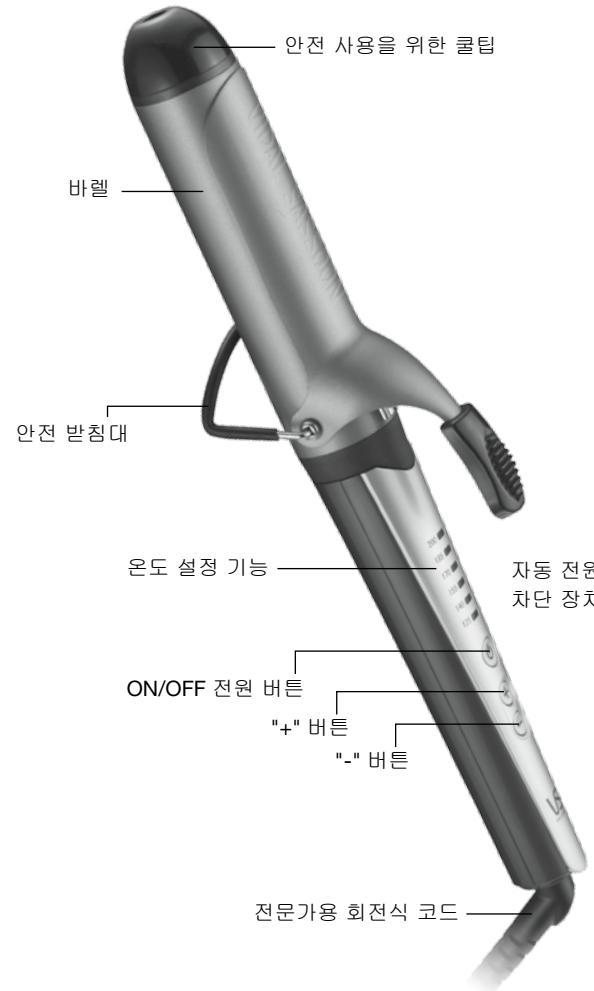

- 지속적인 제품 개발로 인하여 본 구매 상품이 사용 설명서의 사진과 다소 차이가 있을 수 있습니다.
- 고급 가열 부품
  - On/off 전원 버튼
  - 온도 디지털 표시, 조절 가능한 전자 온도 125°C 140°C 155°C 170°C 185°C 200°C
  - 고리가 장착된 360도 파워 회전 코드
  - 60분 자동 전원 차단 장치

### 사용 방법

60초의 빠른 예열 기술로 모발 타입에 따라 다양한 스타일 연출이 가능합니다.

### 컬링 방법

- 플러그를 가정용 콘센트에 연결합니다.
- 원하는 온도를 "+", "-" 버튼을 이용해 조절하십시오.
- on/off 버튼을 누르면 아이론이 빠르게 가열됩니다. 절대 아이론을 켜 둔 상태로 방치하지 마십시오.
- 설정된 온도에 도달할 때까지 LED 표시등이 깜빡입니다.
- 스타일링 하기 전, 모발을 건조시킨 후 고르게 빗어 줍니다. 집게를 눌러, 모발을 바렐과 집게 중간에 고르게 높은 후, 부드럽게 모발 끝까지 내려줍니다. 컬이 자연스럽게 연출 될 수 있도록 모발을 원하는 방향에 따라 완벽하게 말아줍니다. 인컬을 연출 할 때는 안쪽으로 말아주시고, 아웃컬 연출을 위해서는 바깥 방향으로 말아주시기 바랍니다.
- 원하는 컬의 높이까지 모발을 말아줍니다, 이때, 아이론이 두피에 닿지 않도록 주의합니다. 모발에 감은 후에는 머릿결이나 길이에 따라 8-12 초 동안 잡고 있도록 합니다. 탄력있고 탱글탱글한 컬 스타일의 경우는 모발을 조금만 강고, 자연스럽게 흐르는듯한 스타일을 연출 할 때는 더 많은 양을 감아주십시오
- 아이론에서 모발을 빼낼 때에는 아래 집게 버튼을 눌러 주십시오. 컬을 고정시키기 위해서는 열이 식기 전에 브러쉬 및 빗질을 상가해 주십시오.
- 사용 후 on/off 버튼을 눌러 전원을 끈 후, 열을 식힙니다.
- 재가열을 원하시면 on/off 버튼을 다시 누르시면 됩니다

### 경고

본제품의 발열판은 단 몇 초 만에 빠르게 예열되어 매우 뜨겁습니다. 전원이 켜진 상태로 피부와 접촉되지 않도록 주의하십시오. 고온을 선택했을 때 컬링 아이론에 적용된 특수 기술로 바렐 부분이 매우 뜨거워집니다. 제품을 사용하기 전에 항상 테스트 컬을 하여 원하는 헤어 스타일을 연출 할 수 있도록 하십시오.

### 주의 및 관리

이 제품은 가정용으로 제작되었습니다. 제품 청소를 할 때에는 코드를 뽑아 제품이 식은 상태에서 청소해 주십시오. 바렐의 표면을 닦아낼 때에는 약간 젖은 마모성이 없는 천으로 부드럽게 닦아주십시오. 물과 같은 다른 어떠한 액체가 아이론 손잡이 안으로 들어가지 않도록 주의하십시오. 기타 서비스는 A/S 센터로 연락하여 받으록 하십시오. 아이론이 뜨거운 때나, 플러그가 콘센트에 꼽힌 채로 제품을 보관하시면 안됩니다. 아이론을 차갑게 식힌 후 박스에 넣어 어린이의 손이 닿지 않는 건조하고 안전한

곳에 보관하십시오. 제품을 코드로 감으면 코드가 얇거나 조기 손상될 수 있으므로 절대 코드를 아이론에 감지 마십시오.

### 사용자 주의 사항

본 제품은 별도의 유지 보수와 윤활유를 필요로 하지 않습니다. 적절한 사용을 위해서는 제품을 반드시 깨끗한 상태로 유지 하여야 합니다. 청소가 필요한 경우, 전원을 끄고 제품이 차가워진 상태에서 천으로 닦아 청소합니다. 만일 코드 또는 제품의 파손으로 작동 되지 않을 시에는 비달사순 서비스 센터로 연락 하시어 수리하십시오. 소비자가 직접 제품을 수리하려 시도 하지 마십시오. 제품의 상태를 최상으로 유지하기 위해서는 다음사항을 준수하시기 바랍니다.

- 날카로운 물건으로 기기표면을 긁거나 거친 표면의 제품으로 닦지 마십시오.
- 파마약과 같은 강한 화학물질과 함께 사용하지 마십시오.
- 강한 세척제품으로 표면을 닦지 마세요. 순한 세제만으로도 기기표면에 잔재해 있는 대부분의 얼룩이 쉽게 제거됩니다.

### 중요사항

제품의 보증기간의 조건에는 장기간의 정상적인 사용으로 인해 자연히 벗겨지는 나노 세라믹 코팅에 대한 서비스 내용은 포함 하고 있지 않습니다.

### 위험

절대로 전선을 잡아당기거나 끄는 등 심하게 구부리지 마시고 전선으로 기기를 너무 단단히 감지 마십시오. 이는 전선의 손상 및 파열, 합선문제를 발생시킬 수 있습니다. 전선을 수시로 확인하시고 손상됐을 시엔 제품사용을 즉시 중단하시기 바랍니다.

### 보관

제품을 사용하지 않을 때는 반드시 전원을 안전 하게 분리하고 제품을 차갑게 한 후 어린이의 손이 닿지 않는 안전하고 건조한 곳에 보관하십시오. 전원에서 분리할 때는 감자기 잡아당기거나 너무 팽팽하게 전선을 잡아당기지 마시고 전선으로도 제품을 감지 마십시오. 제품의 연결부위의 전선을 곧게 유지하여 자연스럽게 걸어두거나 놓아두도록 합니다.

### 날짜 코드

WYYXX는 제조일자로서 W 는 주, Y 는 연도로 보시면 됩니다.

### 제품 품질 보증서

성명	
전화번호	/휴대폰번호
e-mail	
주소	
구입일자(년/월/일)	
모델번호(사용설명서 앞면 표기)	
대리점명(구입처)	

#### ■ 주의사항

- 서비스를 받고자 하실때는 이 보증서와 구입 영수증을 제시하여 주십시오.
- 제품 구입일자가 고쳐지거나, 지워졌을 경우에 본 보증서는 무효입니다.
- 이 보증서를 분실하실 경우, 재발행되지 않습니다.

### 본 보증서는 보관하십시오

#### ■ 품질 보증의 조건

- 본 제품의 품질보증 기간은 구입 일자로부터 2년간 입니다.
- 일상적인 사용에 의한 제품의 마모나, 마멸 또는 천재지변에 의한 제품의 손상 및 사용 설명서 상의 주의사항을 따르지 않고 임의로 사용하거나, 취급부주의로 인한 고장 등에 대해서는 본 보증서에 의한 무상 서비스를 받을 수 없습니다.
- 품질 보증서 상의 보증기간 내에는 제조상 또는 제철상의 결함으로 발생된 불량 등 에 대하여 무상 서비스를 받을 수 있으며 폐사의 판단에 따라 부품의 교환 또는 제품의 교환도 가능합니다.
- 본 보증서의 효력은, 품질 보증서와 보증 등록서상의 대리점의 판매 확인과 제품구입 후 4주 이내 보증등록서가 고객 서비스 센터에 우송 되었을 때로부터 발생 합니다.
- 본 제품 품질보증은 수입판매원의 관할 이외 지역과 적법하게 위임 받지 않은 판매처의 보증일 경우 효력을 상실합니다.

서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

#### 수입 판매원

콘에어코리아트레이딩 주식회사  
서울시 성동구 성수이로 66 서울숲드림타워 1304 ~ 1306호  
소비자 상담실 : 1899-0209  
www.vidalsassoon.kr